
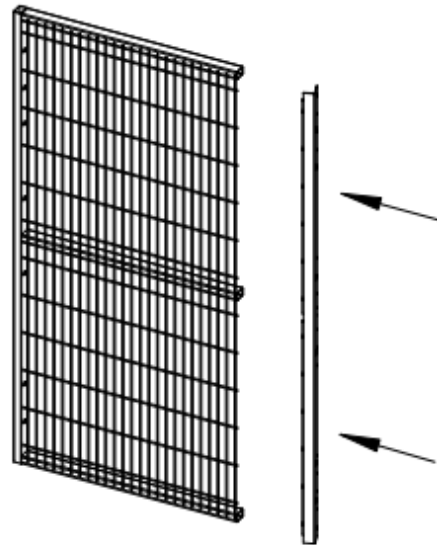


END 2050, 1250

ST20 /ST30


- ① Cut a standard panel

- ② Add the END profile

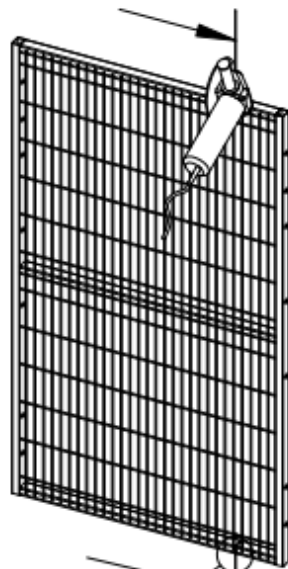


Cut tight to a wire

- ③ Tighten the profile around the wires

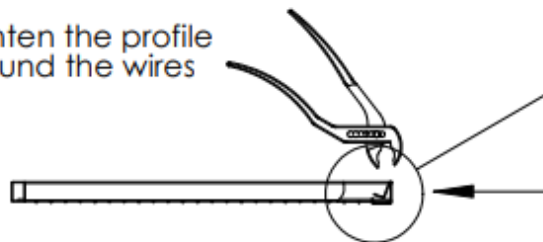

- ④ Lock the profile with bolt in holes not used for fixing

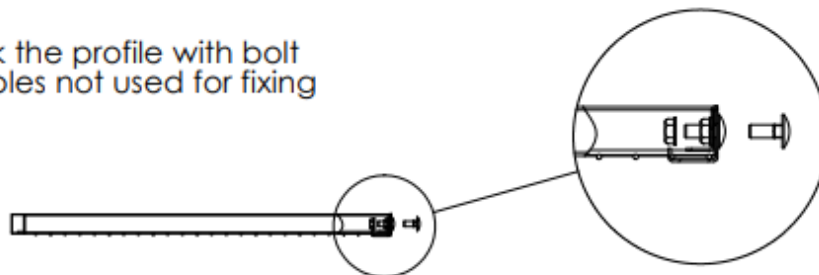




END 2050, 1250
ST20 / ST30

① 15x2x16 ② M8x16

③ 8,4x15x1,5 plastic

Rapid Fix:

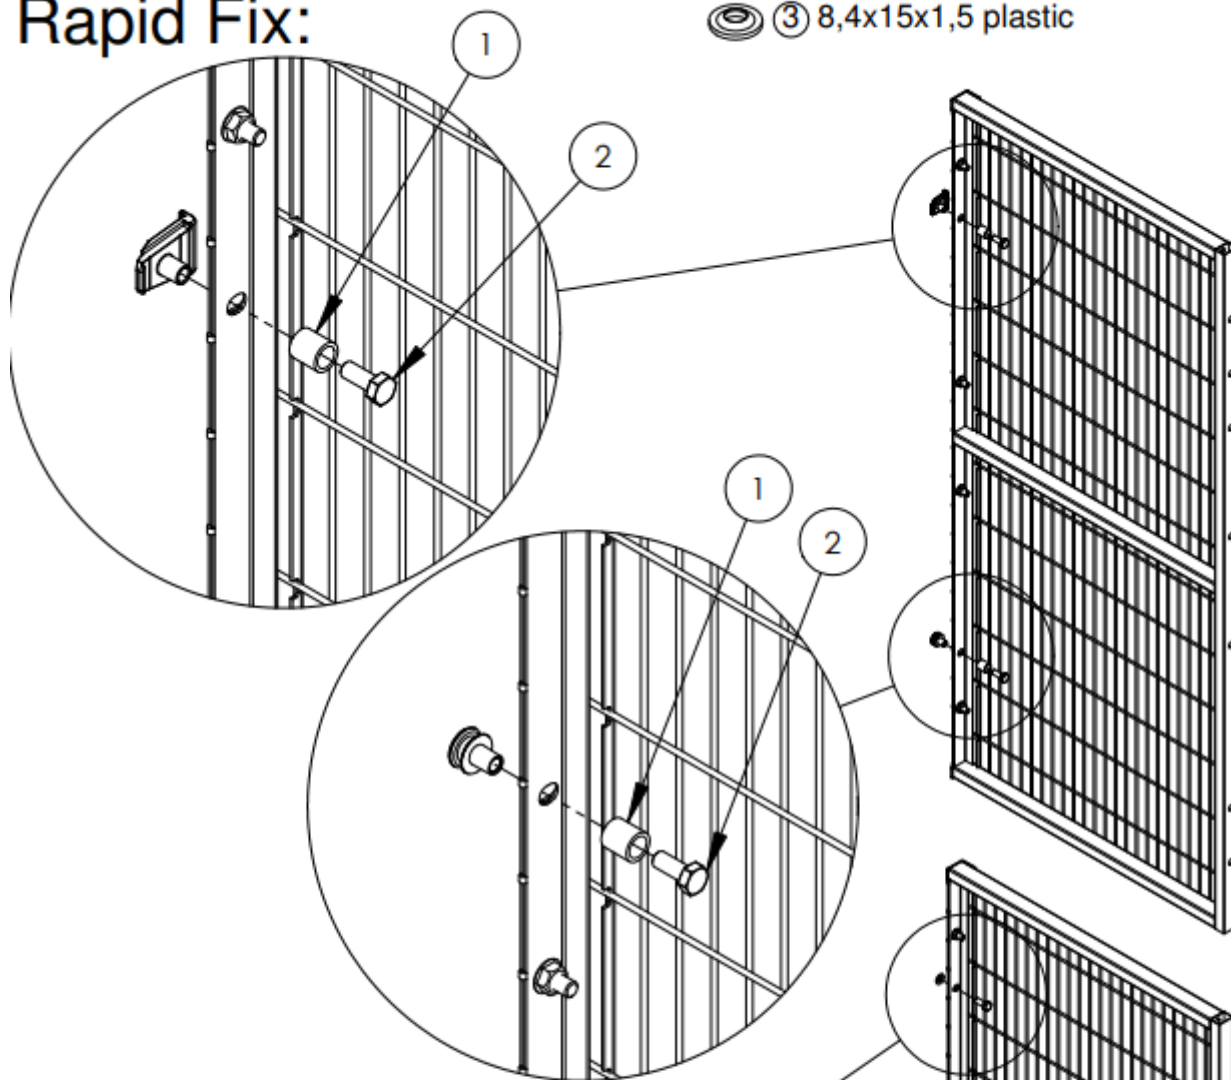

Smart Fix:

